


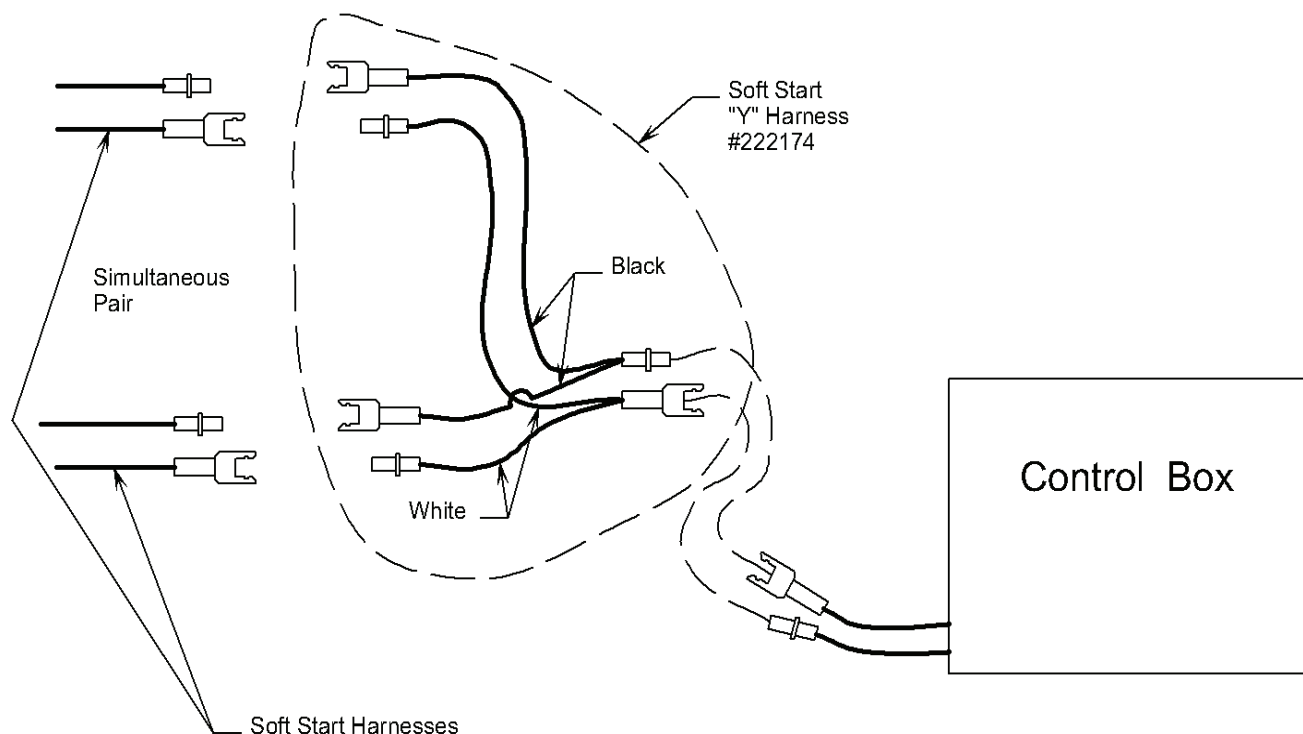

⚠ 1. Disconnect the two 3" long white leads in the control box from themselves.

⚠ 2. Connect the two leads from the soft start harness to the respective leads in the control box.

3. Connect the flag terminals on the other end of the soft start harness to the soft start capacitor.

⚠ 4. Coil the excess length of the soft start harness and secure with the supplied wire tie.

⚠ Note: Reconnect the two 3" long white leads when removing the soft start capacitor. Failure to do so will cause the unit to not function properly.

For simultaneous pairs, wire 2 soft start capacitors in parallel using harness 222174.

REVISIONS	DATE	DATE: 1/15/02	PART NAME:
REL	9-26-78	SCALE: NONE	Swing & Slide Soft Start Connection Through Control Box
REV	5-23-80	DRAWN BY: ADC	MATERIAL:
DCR - 02 - 014	1-17-02	APP. BY:	SPECIFICATIONS:
DCR - 02 - 024	2-26-02	TOLERANCES (UNLESS NOTED)	
		FRACTIONAL ± 1/64	
		X ± .030	
		XX ± .010	
		XXX ± .005	
		ANGLES ± 1/2°	
		SHEET NO.: 1 of 1	
			DRAWING NO.
			PART NO. 142182