




GT1175 U30, DOOR OPEN, BREAKOUT KIT

Instruction Sheet

P/N C-00340 Rev 3-17-18


Nabco Entrances Inc. S82 W18717 Gemini Drive Muskego, Wisconsin 53150
 Phone: (877) 622-2694 Fax: (888) 679-3319 www.nabcoentrances.com
 NABCO hours of Operation: Monday to Friday 8:00 a.m.- 4:30 p.m. (Central Time)

SERVICE PARTS: KIT P/N A-01042

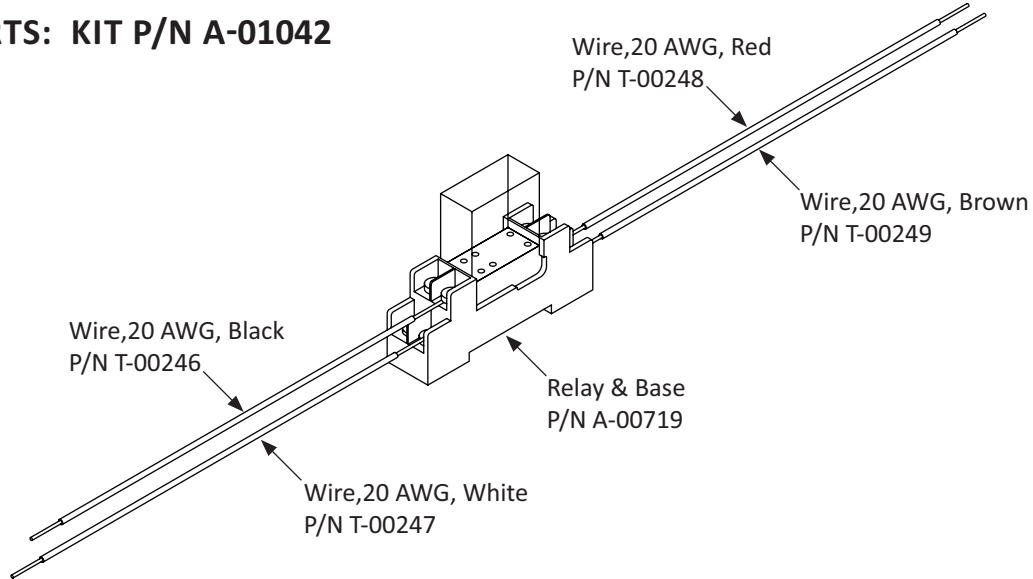

DN 1984

CHAPTER 1: WIRING DIAGRAM

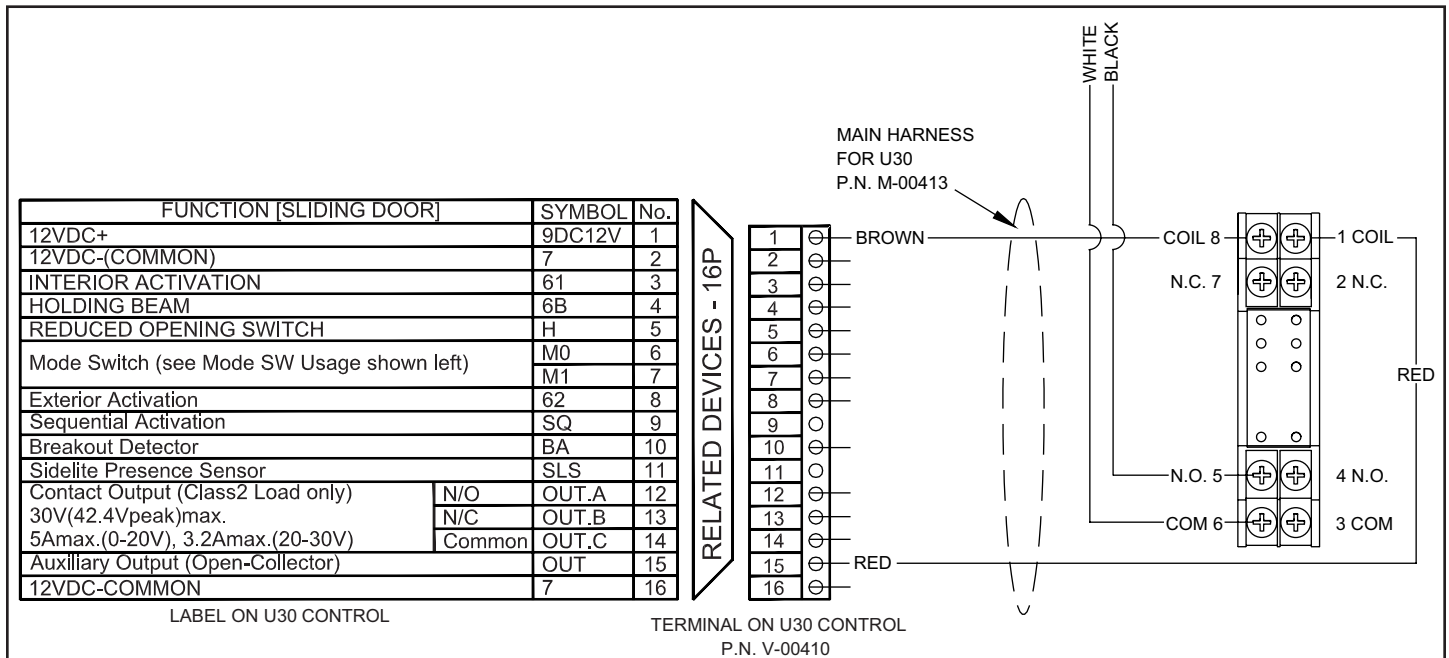

NOTE:

- Aux. Output 2 (Function 23 under "Extra Functions") must be set to "5".
- Mode of Operation: When door opens, or is broken out, Auxiliary Output 2 closes, Output from Relay closes.
- If logic for security needs to be reversed (from normally open to normally closed) move Black Wire on Relay from Terminal 5 (N.O.) to Terminal 7 (N.C.).
- Other wires not shown for simplicity.

DN 1985