



GT800 Mounting Bracket Instruction Sheet

P/N C-00325 Rev 3-11-19

Nabco Entrances Inc. S82 W18717 Gemini Drive Muskego, Wisconsin 53150
 Phone: (877) 622-2694 Fax: (888) 679-3319 www.nabcoentrances.com
 NABCO hours of Operation: Monday to Friday 8:00 a.m.- 4:30 p.m. (Central Time)


SERVICE PARTS: KIT P/N A-00681

SHSS 1/4-20 x .5"L
Oval Point
P/N T-00388




SHSS 1/4-20 x .5"L
Knurl Point
P/N T-00073


Rivnut 1/4-20 x .027"
Grip Range
P/N T-00048

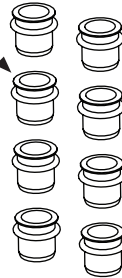

FHMS 1/4-20 x 1"L
PHIL
P/N T-00294

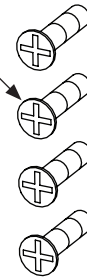

RHMS 1/4-20 x 2.250"L
Slot
P/N T-00387

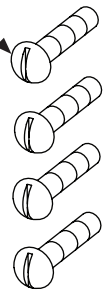

DN 1961

1. Assemble the Mounting Bracket onto the Header. Measure and mark (8) 0.391 holes for Rivnuts. Please see the Hole Pattern sample on Figure 1.
2. Remove the Header. Insert (8) Rivnuts into the holes located on the back face of the Mounting Bracket.
3. Secure the Mounting Bracket to the Frame with (4) 1/4-20 x 1"L, Phillips Head Screws.
4. Secure the Header to the Mounting Bracket with (4) 1/4-20 x 2.25"L, Slot Head Screws.
5. Go to the bottom of the Mounting Bracket/Header assembly. Measure and Mark (4) holes for 1/4-20 Set Screws.
6. Secure the bottom of the Mounting Bracket/Header assembly with (4) Set Screws.

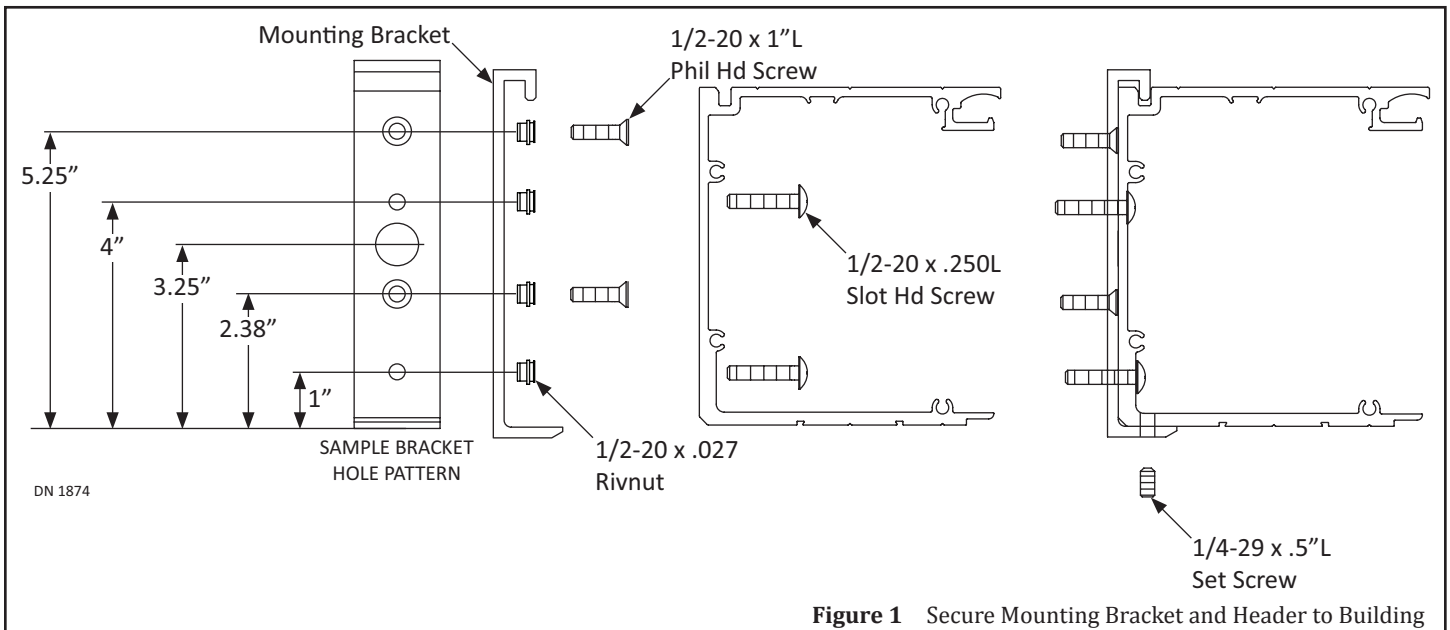


Figure 1 Secure Mounting Bracket and Header to Building