

NABCO ENTRANCES TECHNICAL BULLETIN

Gyro Tech
S82 W18717 Gemini Drive
Muskego, Wisconsin 53150
Phone: (toll free) 1-877-NABCO WI
Fax (toll free): 1-888-679-3319

Effective Date: December 6, 1999

Who is the technical contact?
Michael Laeuger


Rebooting the Acusensor

Due to the number of field comments regarding the sensing range of the Acusensor's depth, we find it necessary to remind you that ***any changes*** to the settings ***require*** the Acusensor be rebooted. This includes moving the depth lever on the side of the unit!

To reboot, it is necessary to remove the power to the Acusensor. This can be done one of two ways:

1. Unplug the connector from the acusensor for 5 seconds, *or*
2. Turn off the power switch inside the header.

The Acusensors do NOT reboot by turning the door operation switch to off on the sidelight!

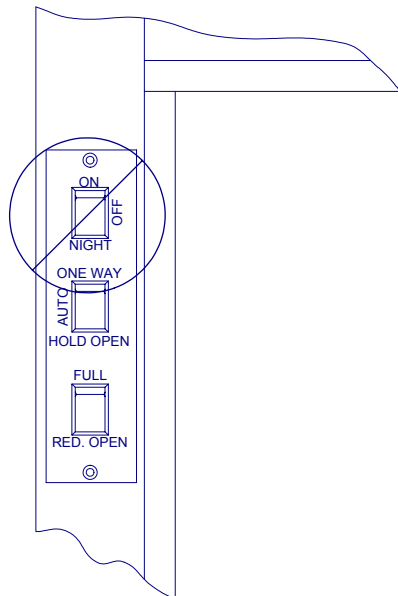

If the Acusensor is not rebooted, any changes made to the settings will not take effect or be put into memory.

Bulletin Number: 17
