



Nabco Entrances, Inc.
S82 W18717 Gemini Drive
Muskego, Wisconsin 53150
Phone: (877) 622-2694
www.nabcoentrances.com

Hours of Operation: Monday to Friday 8:00 am - 4:30 pm (Central Time)

ICU 2400 Manual Sliding Door Owner's Manual

Table of Contents

CHAPTER 1:	SAFETY ALERT DEFINITIONS	2
CHAPTER 2:	GENERAL SAFETY RECOMMENDATIONS	2
CHAPTER 3:	WARRANTY	2
CHAPTER 4:	GETTING STARTED	3
CHAPTER 5:	OPERATION	3
	Section 5 .1: Movement	3
	Section 5 .2: Breakout	3
CHAPTER 6:	DAILY SAFETY CHECKS	3
CHAPTER 7:	SAFETY LABEL	4

Nabco Entrances, Inc., has a wide network of Factory Branches and Authorized Representatives in North America. Their friendly, qualified installers and technicians always strive to exceed your expectations from install to after-sales service. Nabco's factory branches and independent distributors may be located on our website at <https://www.nabcoentrances.com/service/find-a-distributor>.

Serial Number: _____
Installation Date: _____
Installed by: _____
Service Contact Name: _____
Service Contact Number: _____

CHAPTER 1: SAFETY ALERT DEFINITIONS

Throughout this manual, you will find safety alerts and helpful/informational messages. The following is an explanation of what they mean.

WARNING Indicates a hazard which, if not avoided, could result in death or serious personal injury.

CAUTION Indicates a hazard which, if not avoided, could result in minor or moderate personal injury.

Notice: The message provides information necessary for the protection of the unit.

Note: The message provides tips for use, care, and maintenance of the unit.

CHAPTER 2: GENERAL SAFETY RECOMMENDATIONS

CAUTION Do not operate any Slide Door Unit without fully understanding how it functions. If you do not fully understand, ask a qualified technician. Failure to do so may result in bodily injury or equipment damage and will nullify all warranties.

Notice: Inspect door operation daily using the Daily Safety Checklist within this manual.

CHAPTER 3: WARRANTY

NABCO ENTRANCES, INC., for its product line, provides its customers the following limited warranty:

- NABCO ENTRANCES, INC. will exchange or repair, F.O.B. the plant, any component found defective in workmanship and/or material, subject to NABCO's inspection, for a period of 12 months after the date of shipment from NABCO.
- Warranty does not include field service labor. The installation contractor/customer will be responsible for installation and field service. This is NABCO ENTRANCES, INC.'s sole warranty.
- This warranty does not cover loss or damages resulting from causes beyond the manufacturer's control, misuse, neglect, accidents, windstorms, or other acts of God, or acts of terrorism.
- This warranty is for normal use and service. This warranty does not apply to equipment that has been tampered with, repaired, or altered so as to adversely affect conditions of operation.
- Warranty will not obligate NABCO for damages resulting from such alterations, misuse, or acts of God, or acts of terrorism.

CHAPTER 4: GETTING STARTED

The purpose of this manual is to familiarize the Owner with the proper operation of the 2400 Manual ICU Slide Door. It is essential that the Owner recognizes the importance of maintaining a properly functioning door and keeping it in compliance with industry standards for safety.

The 2400 Manual ICU Slide Door includes:

- Header
- Jamb Tubes
- Lead Door Panel
- Trail Door Panel
- Swing Panel

CHAPTER 5: OPERATION

Section 5.1 Movement

1. The Door can be opened and closed by sliding it from one end to the other.

Section 5.2 Breakout


CAUTION During breakout, keep fingers clear of pinch points between the Door Panels.

Notice: Damage can be caused if the Door Panels are not fully open before breakout.

1. Open the Slide Door so it is fully open.
2. While continuing to apply pressure towards the Pivot Jamb, force the Door Panels to swing open.

Note: The panels should swing easily after the initial force.

3. To reset the Doors, swing them back towards the Header and snap them back into place.

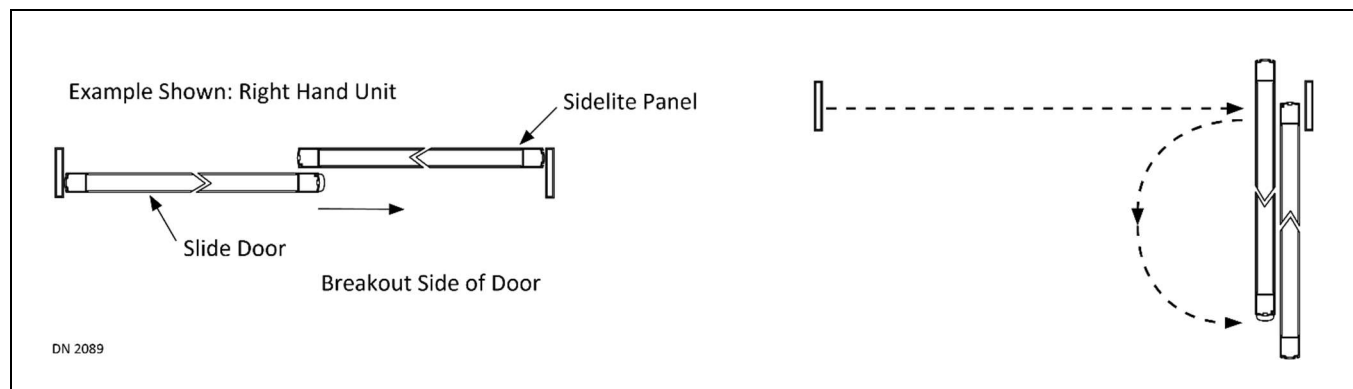

CHAPTER 6: DAILY SAFETY CHECKS

CAUTION Should the door fail to operate per any of the following Daily Safety Checks, DO NOT attempt to repair or adjust the door. Call a Certified Technician for repairs.

To keep the Door operating safely, check the items listed below. Call for service if they are changing with time.

- Force to slide the door open or closed.
- Force to breakout and/or reset the Door Panels.

CHAPTER 7: SAFETY LABEL

Purpose	
Warn users not to stand in front of the Swing Panel where one could get hit by the Sliding Door Panels.	

Thank you for choosing Nabco Entrances, Inc. for your Door needs. We're dedicated to giving you the best products in the industry. If you have any questions, feel free to contact us at <https://www.nabcoentrances.com/contact>.